


Names of each part

Operation section

Depending on the model you purchased, the design of the keys may differ from that shown in this manual, but they are used in the same way.

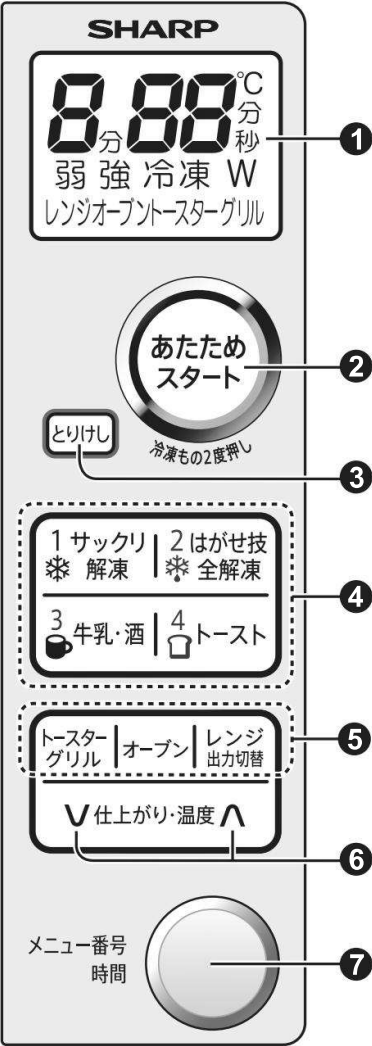

- 1 All information is displayed for display purposes. The backlight does not light up. Displays heating time, temperature, type of heating, etc. *If the display exceeds 10 minutes, the seconds will not be displayed.
- 2 When using automatic microwave heating, (Page 14) Also used as the start key for other heating operations.
- 3 To stop heating midway or to restart an operation. (To pause heating, open the door. To restart, close the door and press Start.)
- 4 Press the automatic heating key (menu number 1 to 4) to start.
- Manual heating key When you want to adjust the heating temperature and time yourself. For fermentation use the oven and set the temperature to 40°C using the temperature key.
- 6 Finishing and temperature key Adjust the automatic heating finish (displays "high" or "low") and oven temperature. (Weak/low (High/higher)
- 7 Rotary knob: Use to adjust the menu number display or menu heating time.

accessories

(1 each)

If the product is damaged or lost during use, please contact the store where you purchased it (fees apply).

Rotating net



Always keep it in the cabinet.

Round plate



Always use this when heating in the microwave. Do not drop or hit it.

*This product cannot be heated using a square plate. (Square plate not included) *

Cookbook (Instruction manual/Cooking)

This product is for the Japanese market and does not include cookbooks in languages other than Japanese. This model is designed exclusively for Japan, with manuals in Japanese only.

• Warranty

*When putting accessories or food in or out, please use commercially available mittens or a thick, dry cloth as needed.